

CABINETDIY

ASSEMBLED RTA CABINETS DIRECT TO YOUR DOOR

P: 888.966.1681 F: 714.886.1638

www.cabinetdiy.com

ASSEMBLY INSTRUCTIONS

Kitchen Base Blind Corner Cabinets

(This assembly instruction sheet applies for all our Base Blind Corner Cabinets.)

❖ General Instruction

- Read the instruction carefully before starting the installation.
- Follow all generally accepted safety procedures during assembly.

❖ Parts List: The following items are included in the carton.

ITEM	DESCRIPTION	Qty.
A	Front Frame w/ Door	1
B	Side Panel (Right & Left)	2
C	Bottom Panel	1
D	Back Panel	1
E	Toe Kick	1
F	Shelf	1
G	Drawer Face	1 (BBC36L/BBC36R)
H	Drawer Box	1 (BBC36L/BBC36R)
I	Slider (pairs)	1 (BBC36L/BBC36R)


NOTE: DRAWER BOX for AGB, TFW and OPB are in separate carton.

DOOR & DRAWER FACE for UPW and CLW are in separate carton.


❖ Instruction

- **STEP 1:** Lay (D) flat, grooves facing upward. Insert (B) into metal clips of (D).
- **STEP 2:** Slide (C) into grooves of (B) and (D).
- **STEP 3:** Attach (A) onto (C) and ((B). Attach (E) onto bottom front of (B) using the metal clips.
- **STEP 4:** Place and screw plastic holders into corners of (A), (B), (D).


STEP 1

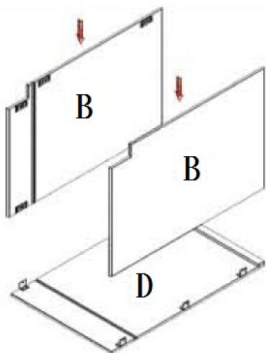

STEP 2

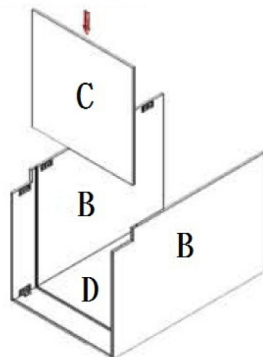

STEP 3

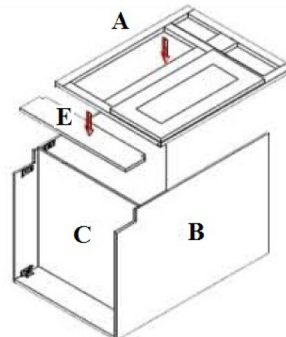

STEP 4

