


CABINETDIY

ASSEMBLED RTA CABINETS DIRECT TO YOUR DOOR



P: 888.966.1681 F: 714.886.1638

www.cabinetdiy.com

- ④ Align actuator (B) just above the adapter (A). Using a pencil, mark far left hole and far right hole of actuator for screw locations.

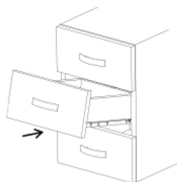

- ③ Return drawer to cabinet.

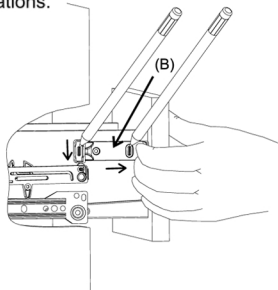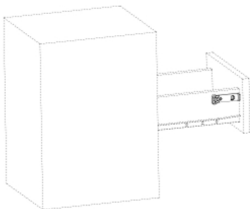

- ⑤ Remove drawer from cabinet. Screw (C2) into marked holes.
Tip: Set drawer on its side for ease of installation.

