


FOR B24 B27 B30 B33

QTY:20
CAM
FITTING

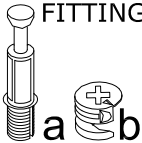

a b

QTY:14
DOWEL



c

QTY:48
1.6mm
SCREW



d

QTY:2
30mm
SCREW



e

QTY:4
SHELF
PIN



g

QTY:8
HOLE
COVER




h

QTY:4
RUBBER
BUMPER




i

100° HINGE QTY:4 sets


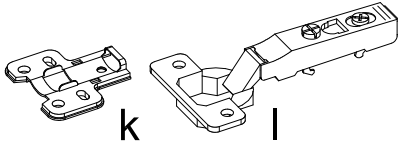


k l


LOW DRAWER QTY:1 set

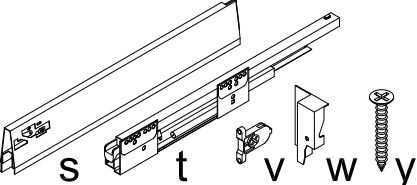


s t v w y

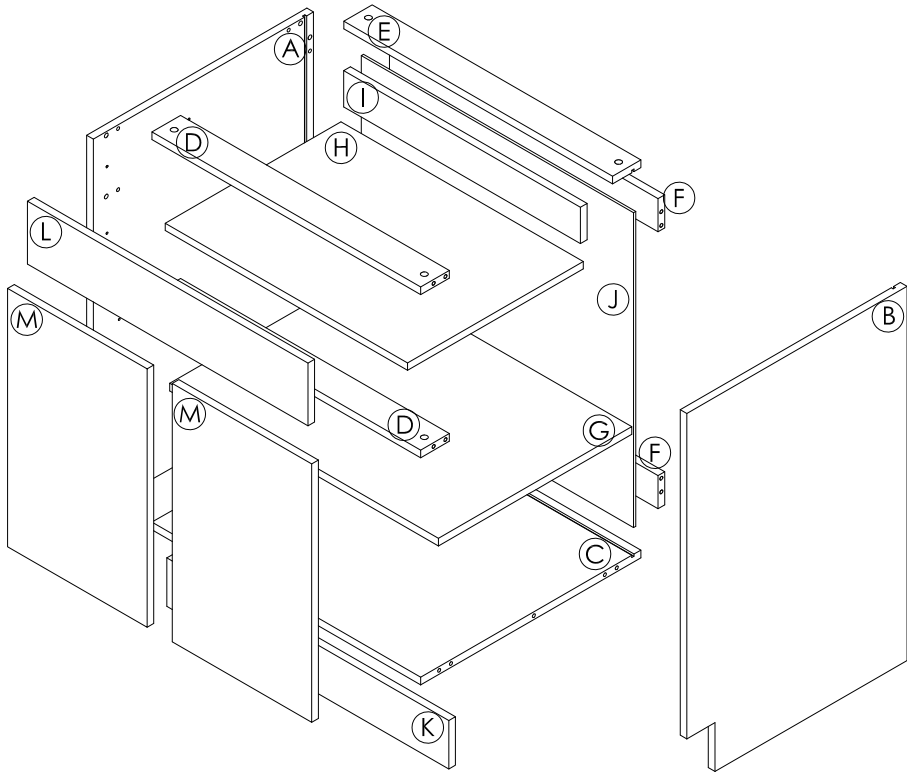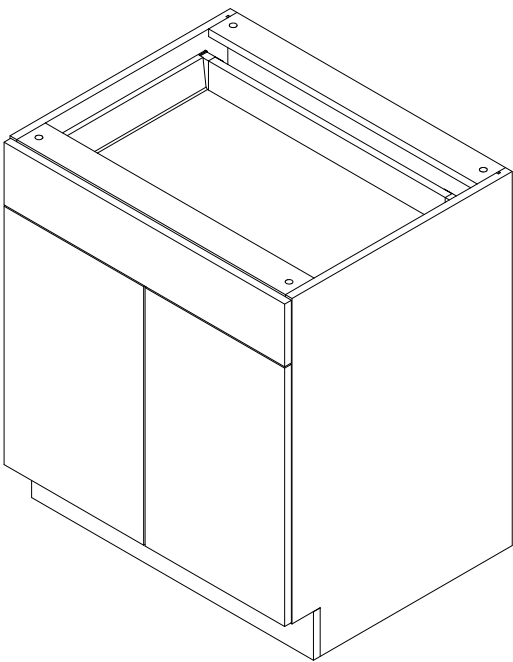


STEP 1

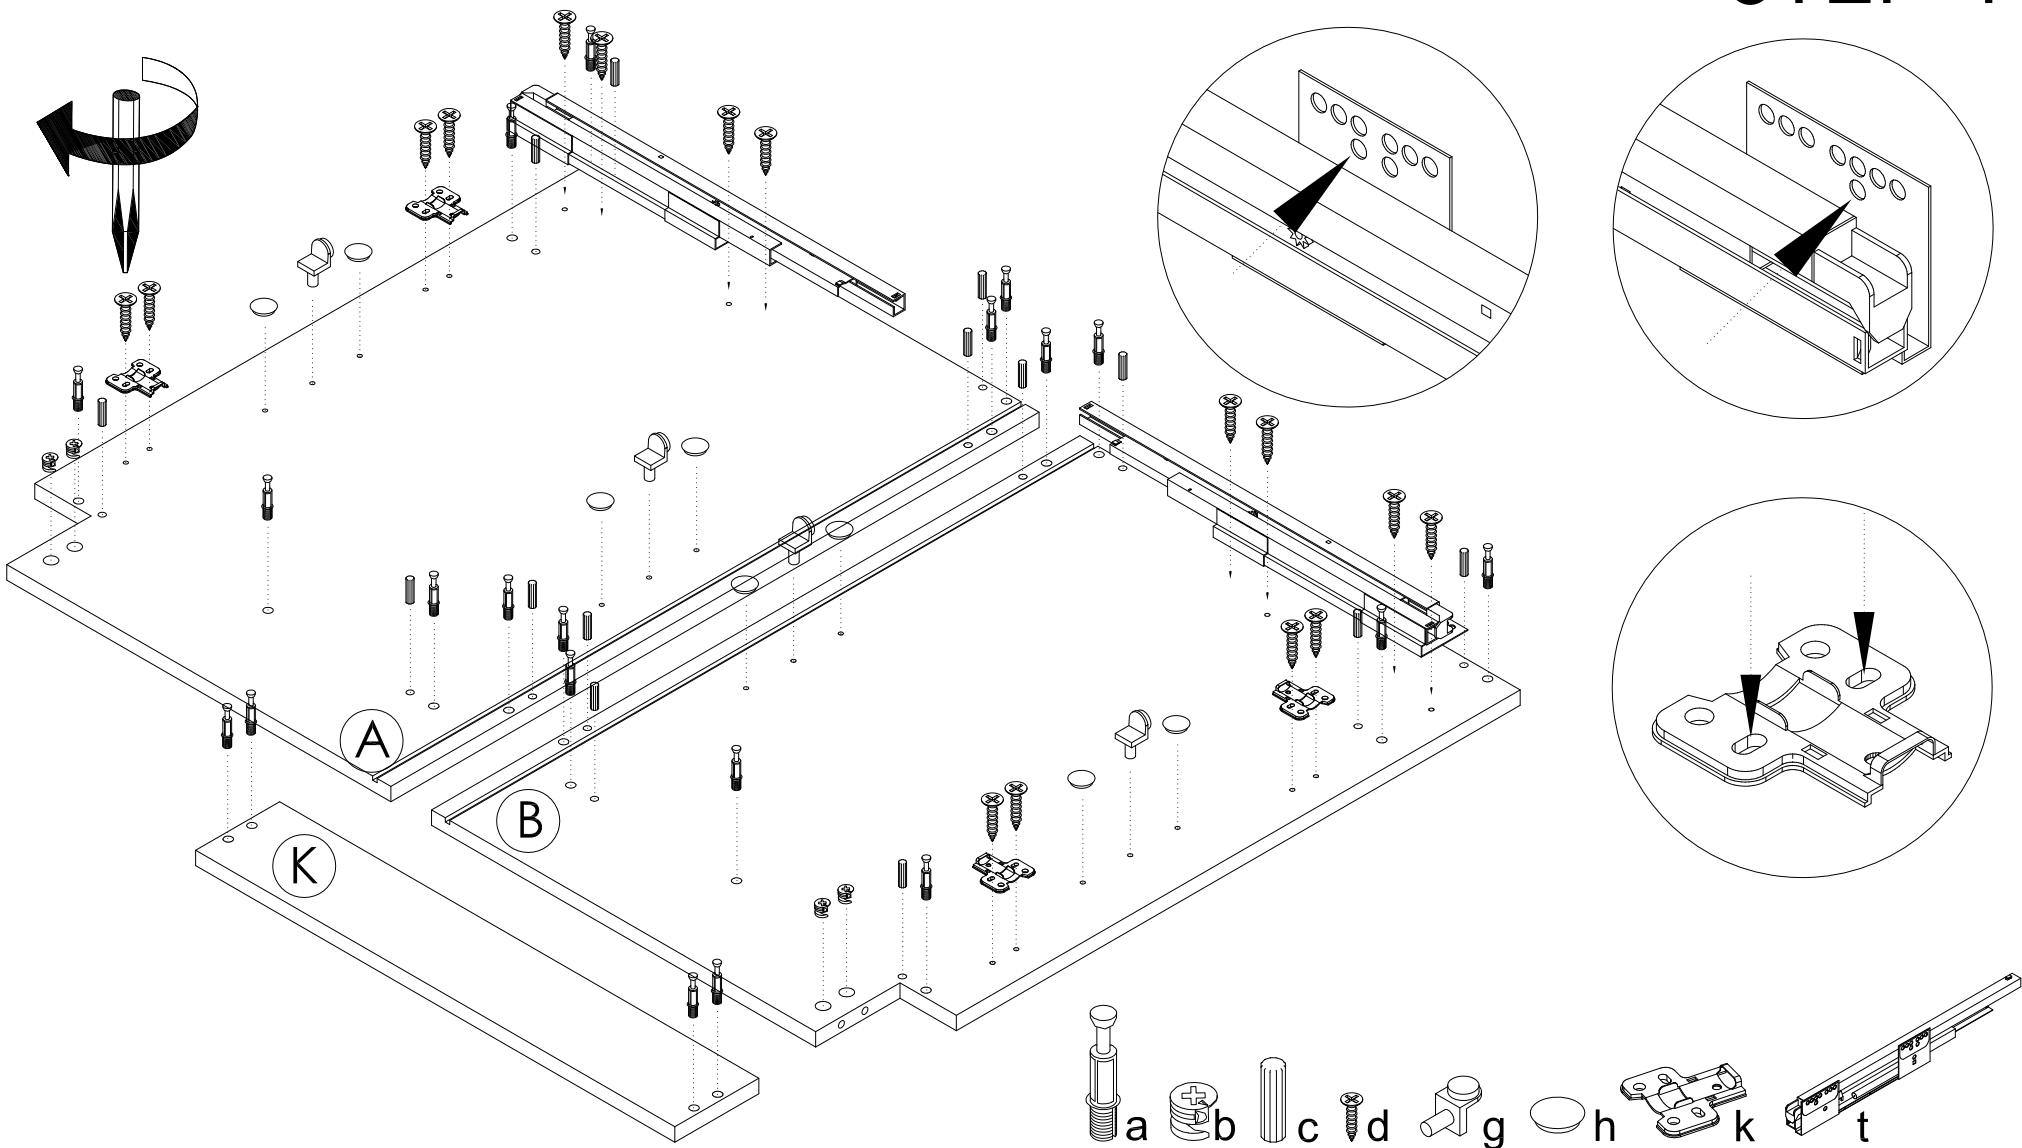


STEP 2

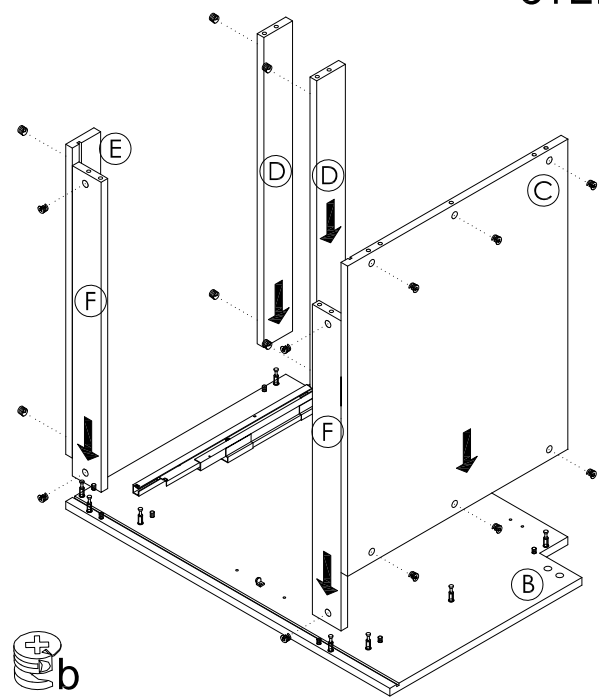


STEP 3

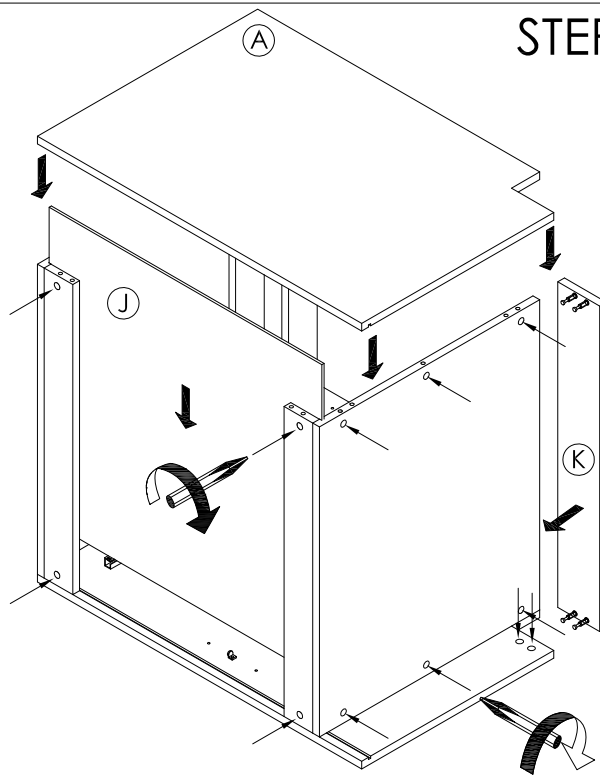


STEP 4

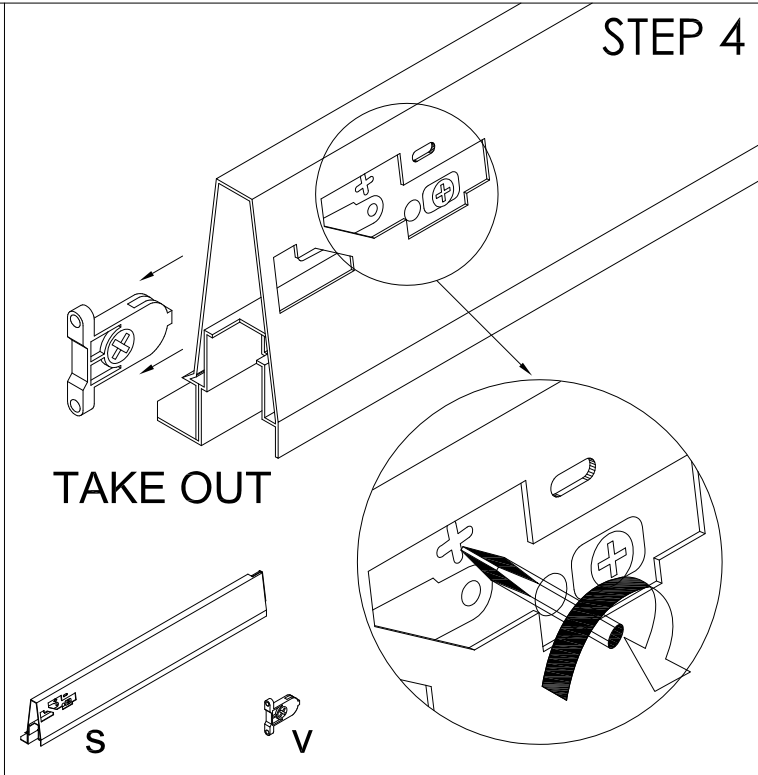


STEP 5

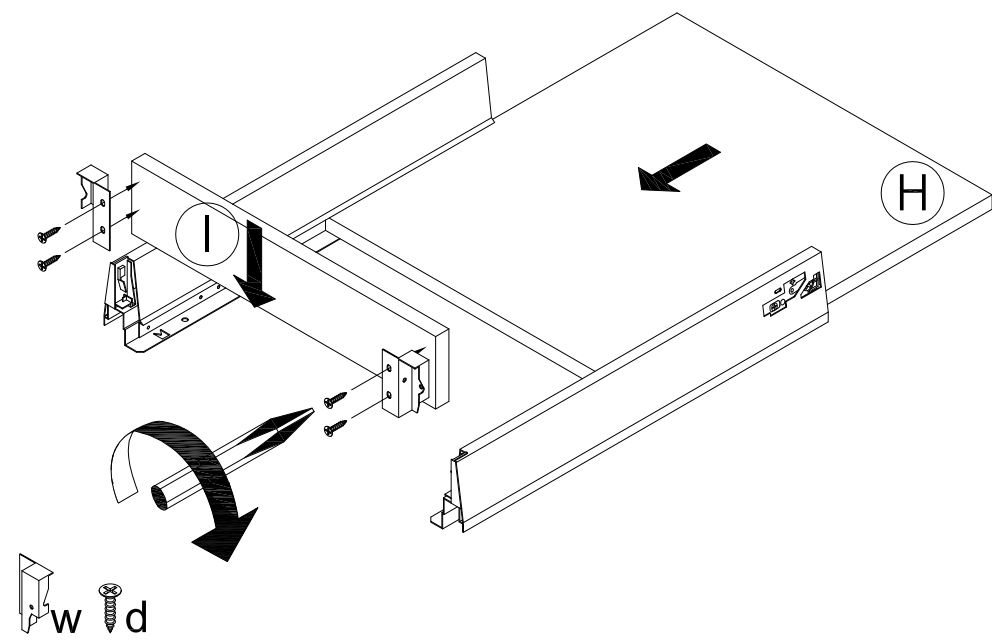


STEP 6

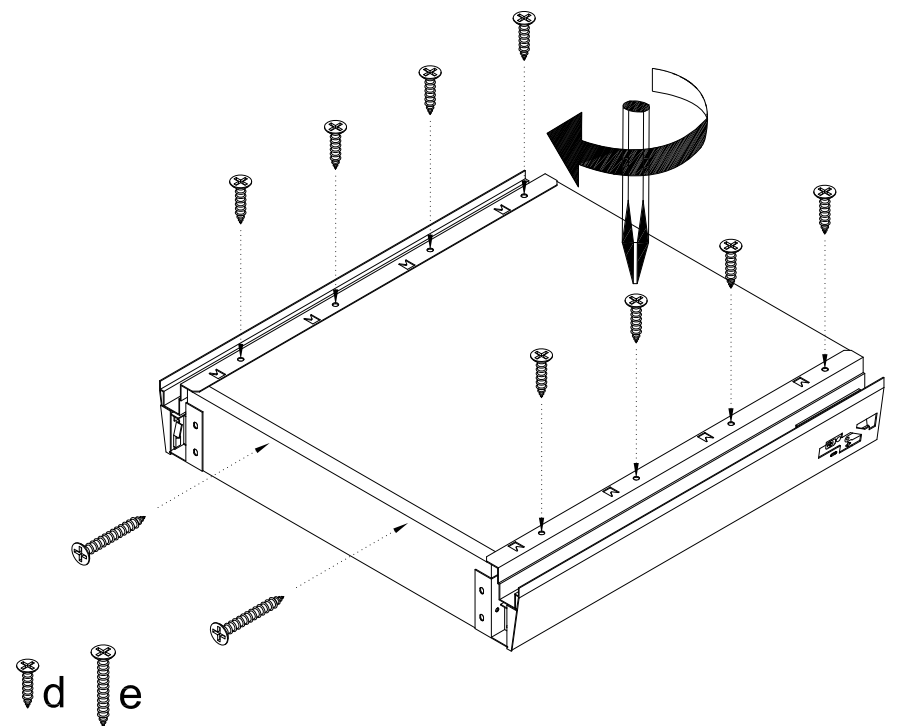


STEP 7

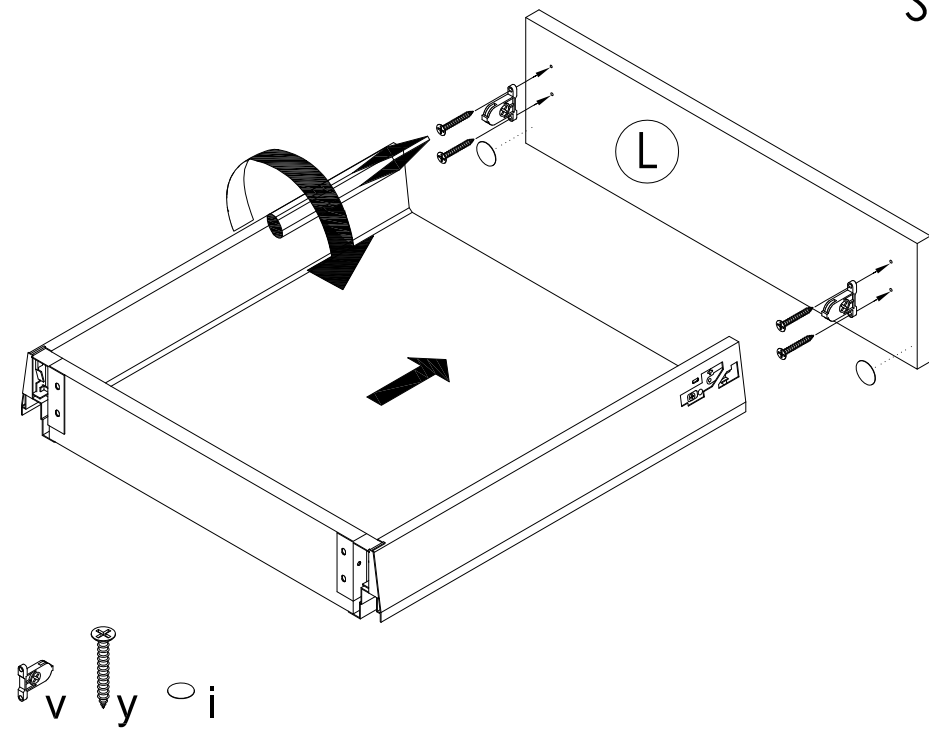







STEP 8

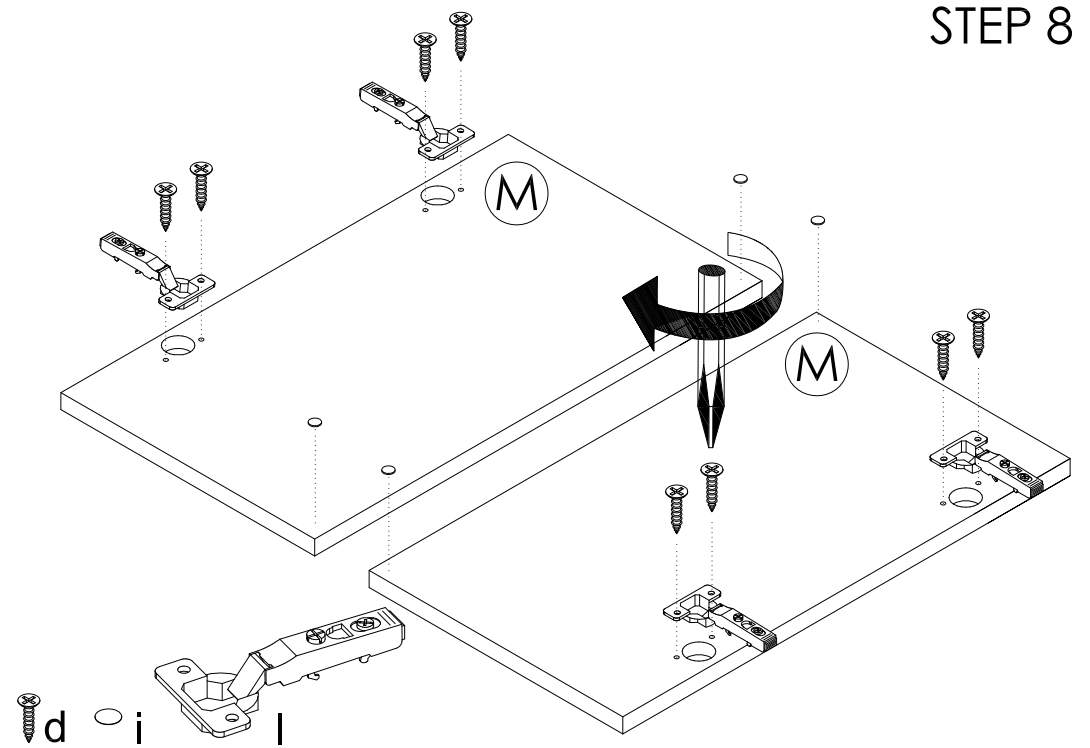


STEP 9

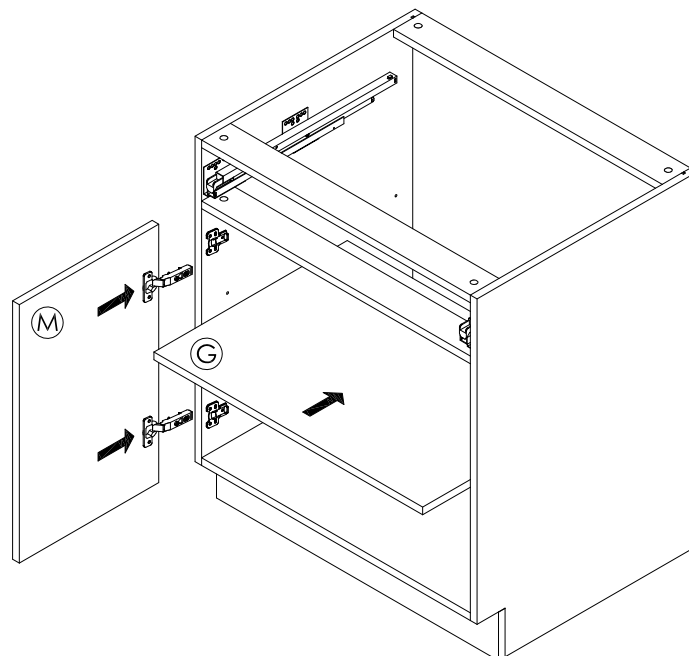


STEP 10

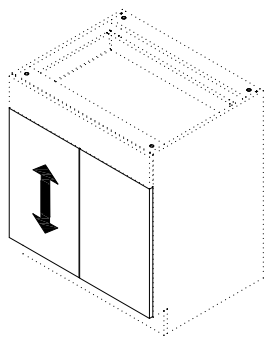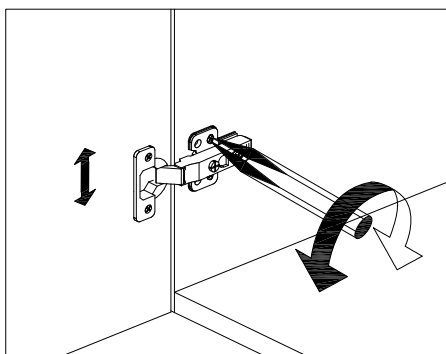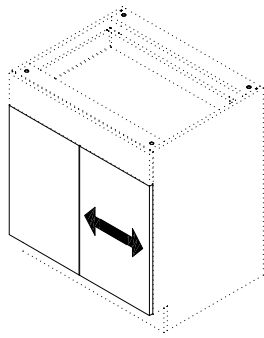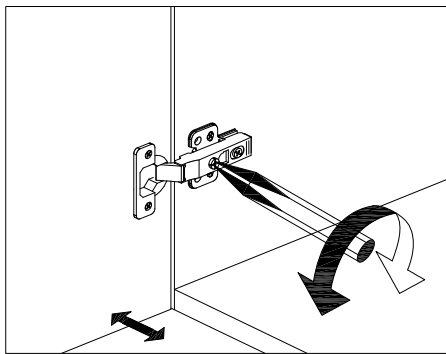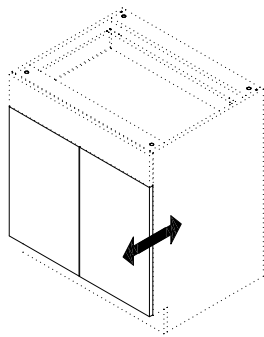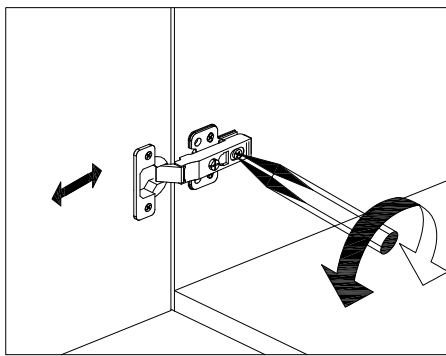





STEP 11

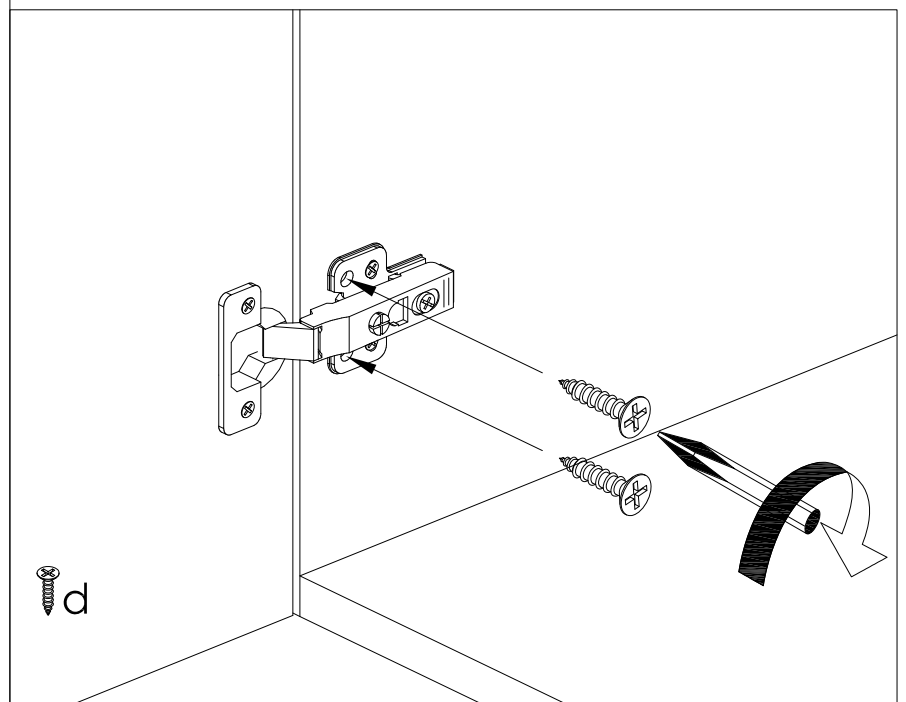

STEP 12

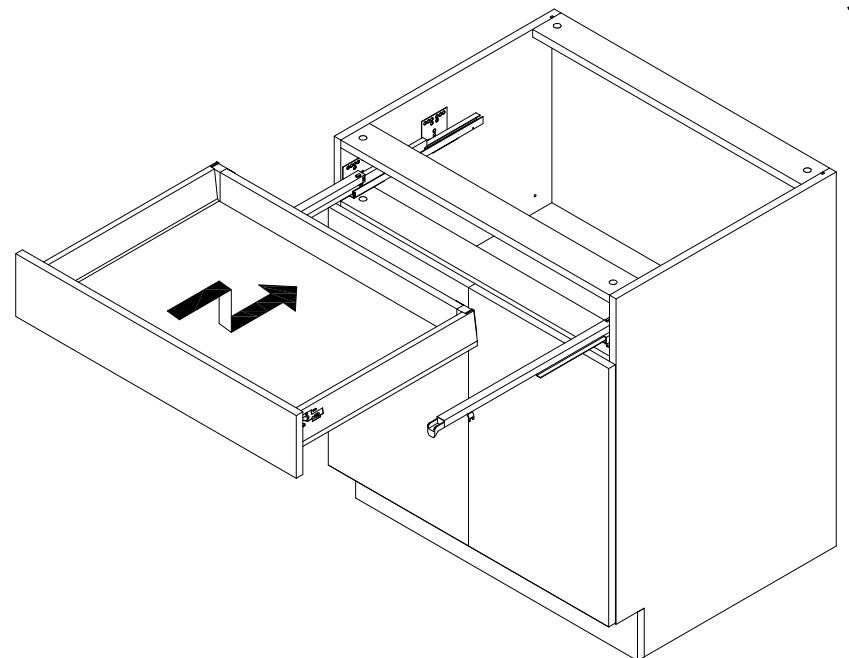

STEP 13

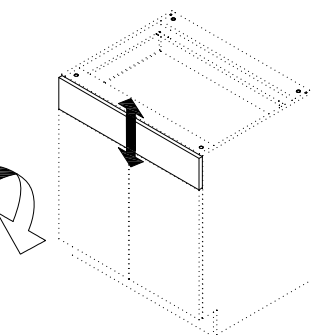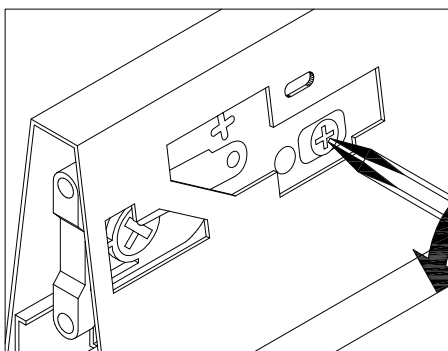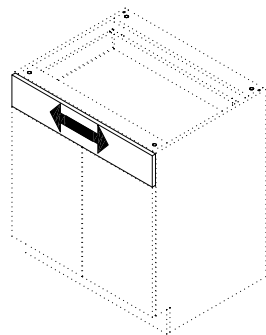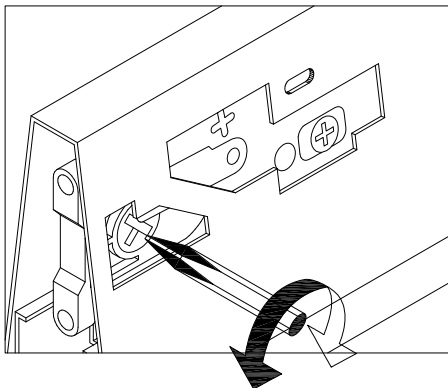

TAKE OUT

